

## ARCADIS Avantic

**SP**

### Installation Instructions

System

Laser Light Localizer Generator

© Siemens AG 2005

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

Print No.: SPR2-330.812.02.01.02  
Replaces: n.a.

English  
Doc. Gen. Date: 04.05

**Document revision level**

The document corresponds to the version/revision level effective at the time of system delivery. Revisions to hardcopy documentation are not automatically distributed.

Please contact your local Siemens office to order current revision levels.

**Disclaimer**

The installation and service of equipment described herein is to be performed by qualified personnel who are employed by Siemens or one of its affiliates or who are otherwise authorized by Siemens or one of its affiliates to provide such services.

Assemblers and other persons who are not employed by or otherwise directly affiliated with or authorized by Siemens or one of its affiliates are directed to contact one of the local offices of Siemens or one of its affiliates before attempting installation or service procedures.

<b>1</b>	<b>Installation and Setting Instructions</b>	<b>4</b>
	Safety information. . . . .	4
	Protection against laser beams. . . . .	4
<b>2</b>	<b>Prerequisites and Preparation</b>	<b>7</b>
	Note . . . . .	7
	Parts required. . . . .	8
	Required aids . . . . .	9
	Removing the cover . . . . .	10
<b>3</b>	<b>Installation, Wiring, and Programming</b>	<b>11</b>
	POWERPHOS wiring . . . . .	11
	Assembling the visual localizer on the POWERPHOS. . . . .	12
	Changing the configuration (ARCADIS Avantic only): . . . . .	13
<b>4</b>	<b>Functional Test and Final Steps</b>	<b>14</b>
	Functional test . . . . .	14
	Final Work Steps . . . . .	15
	Affixing the identification labels for the U.S.A. . . . .	16
	Affixing the identification labels for Great Britain and other countries . . . . .	18
<b>5</b>	<b>Changes to Previous Version</b>	<b>20</b>

## Safety information

### Protection against laser beams

This product contains two class 2 lasers (U.S.A.: class 2 laser).

Observe the safety information in ARTD-002.731.03...


When working with the laser light localizer, do not look directly into the laser beam.

## Labels for U.S.A.:


Warning logotype




Certification label:

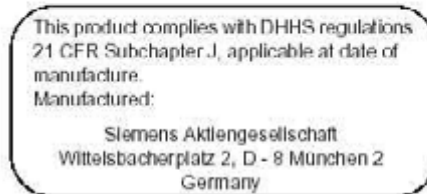

Identification label:

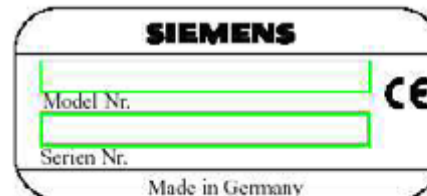

Label:

 

Laser aperture label:



Fig. 1: USA labels

## Labels for all other countries

Warnschild nach IEC 825


Warning label according to IEC 825



English	<b>LASER RADIATION</b> DO NOT STARE INTO BEAM <b>CLASS 2 LASER PRODUCT</b> EN 60825-1:2014+A1:2021 P <sub>0</sub> ≤ 1 mW; λ = 540-700 nm	<b>LASERSKO ZRAČENJE</b> NE GLEDajte U BEAM <b>LASER PROIZVOD 2. KLASA</b> EN 60825-1:2014+A1:2021 P <sub>0</sub> ≤ 1 mW; λ = 540-700 nm	Aufkleber gemäss landesüblicher Sprache verwenden:  Use the label for the respective local language:
	<b>RADIACÃO A LASER</b> NÃO OLHAR PARA O FEIXE <b>PRODUTO LASER CLASSE 2</b>	<b>PROMIENOWANIE LASEROWE</b> NIE WOLNO PATRZEC NA PROMIEN LASERA <b>PRODUKT LASEROWY KLASA 2</b>	
Bra		Pol	

Kennschild:

Identification label:

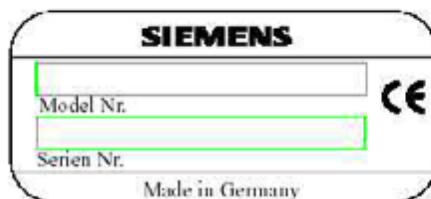

**SECOND SET OF LABELS**  
**LASER**

Fig. 2: Labels for other countries

## Note

These installation instructions only apply to the subsequent installation of a laser light localizer in the ARCADIS Avantic.

## Parts required

**ARCADIS Avantic, complete laser light localizer: 10 04 7655,**  
consisting of:

- Light beam localizer
- 4x spacers
- 4x screws
- Warning labels according to IEC 825 (text and symbol)
- Identification label
- for U.S.A.: Class 2 laser warning logo type and DHHS certification label
- Various small parts



*Fig. 3: Required\_parts*



## Required aids

Tool kit (including Allen wrench)

## Removing the cover

- Disconnect the ARCADIS Avantic power plug.
- Remove the cover plate from the basic unit.
- Remove the POWERPHOS cover by carefully loosening the bonding surfaces on the long sides of the cover.

## POWERPHOS wiring

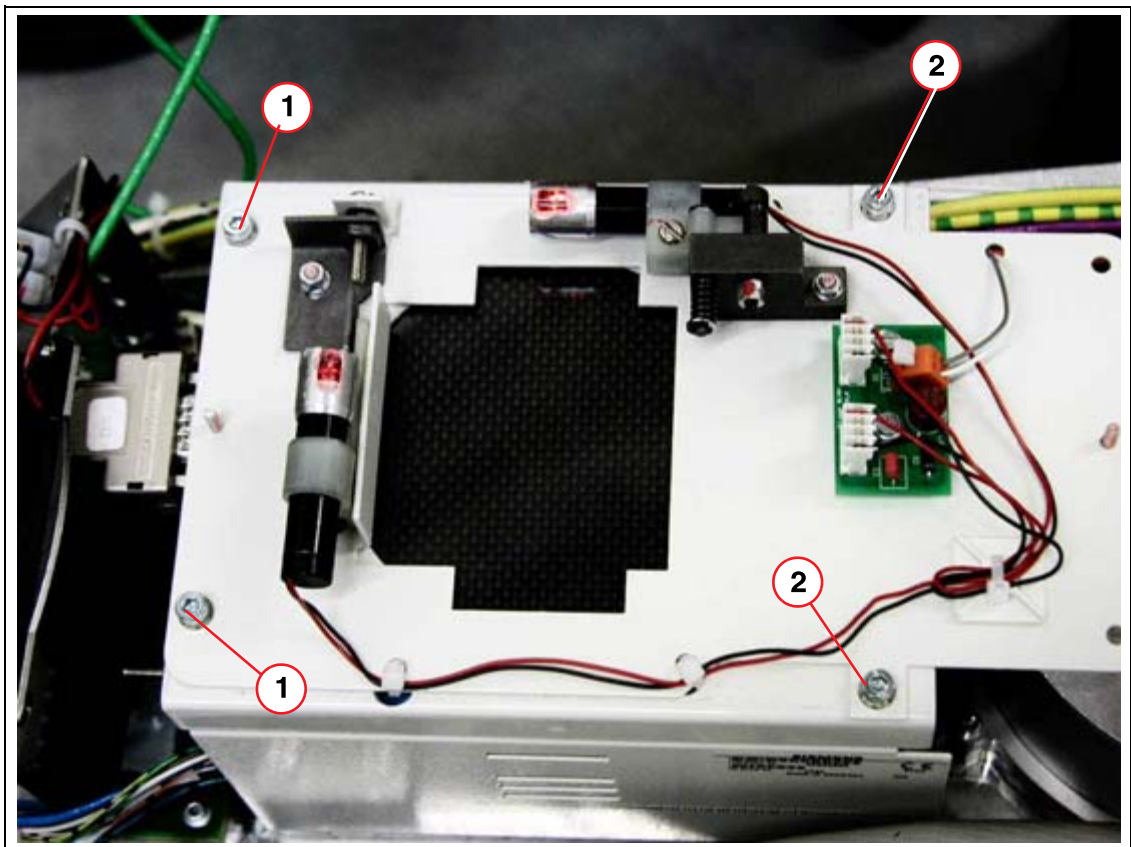


Fig. 4: Laser\_unit

- Loosen and remove the cover from the tube collimator.
- Route the spare leads (white and gray) up and out through the back.
- Replace the cover of the tube collimator.


## Assembling the visual localizer on the POWERPHOS

- Loosen the screw ([1/Fig. 4 / p. 11](#)).
- Without Diamantor:
  - Insert the bolts provided into the threaded holes.
- With Diamantor:
- Install the visual localizer as shown in ([Fig. 4 / p. 11](#)) and secure it to the POWER-PHOS via 4 screws and contact disks ([1 und 2/Fig. 4 / p. 11](#)).
- Connect the white spare lead to point X55.1 (+).
- Connect the gray spare lead to point X55.4 (-).
- Secure the two spare leads using cable ties.

## Changing the configuration (ARCADIS Avantic only):

- Log on to the service menu.
- Click <Main System>-<Configuration>-<Options>.
- Set "Laser Existing" to <yes> and click <Save>.
- Back up the parameters.

## Functional test

- System ON.
- Test the functioning of the  at the operating console of the basic unit:
  - When the laser light localizer is switched on, the LEDs must be lit in this button and both laser diodes.
- Test the automatic switch off of the laser light localizer: Switch on the laser light localizer. The two laser diodes must shut off automatically after approx. 5 minutes.

<b>NOTICE</b>
---------------

---

**Important with regard to the laser light localizer:**

- ⇒ **Before performing the final steps, the laser light localizer has to be adjusted according to the provided adjustment instructions.**
-

## Final Work Steps

**Attaching the cover:**

**Note for U.S.A.:**When using the laser light localizer, remove the spacer!

**Installing the covers:**

- Replace the cover on the SIREMOBIL/ARCADIS Avantic.

## Affixing the identification labels for the U.S.A.

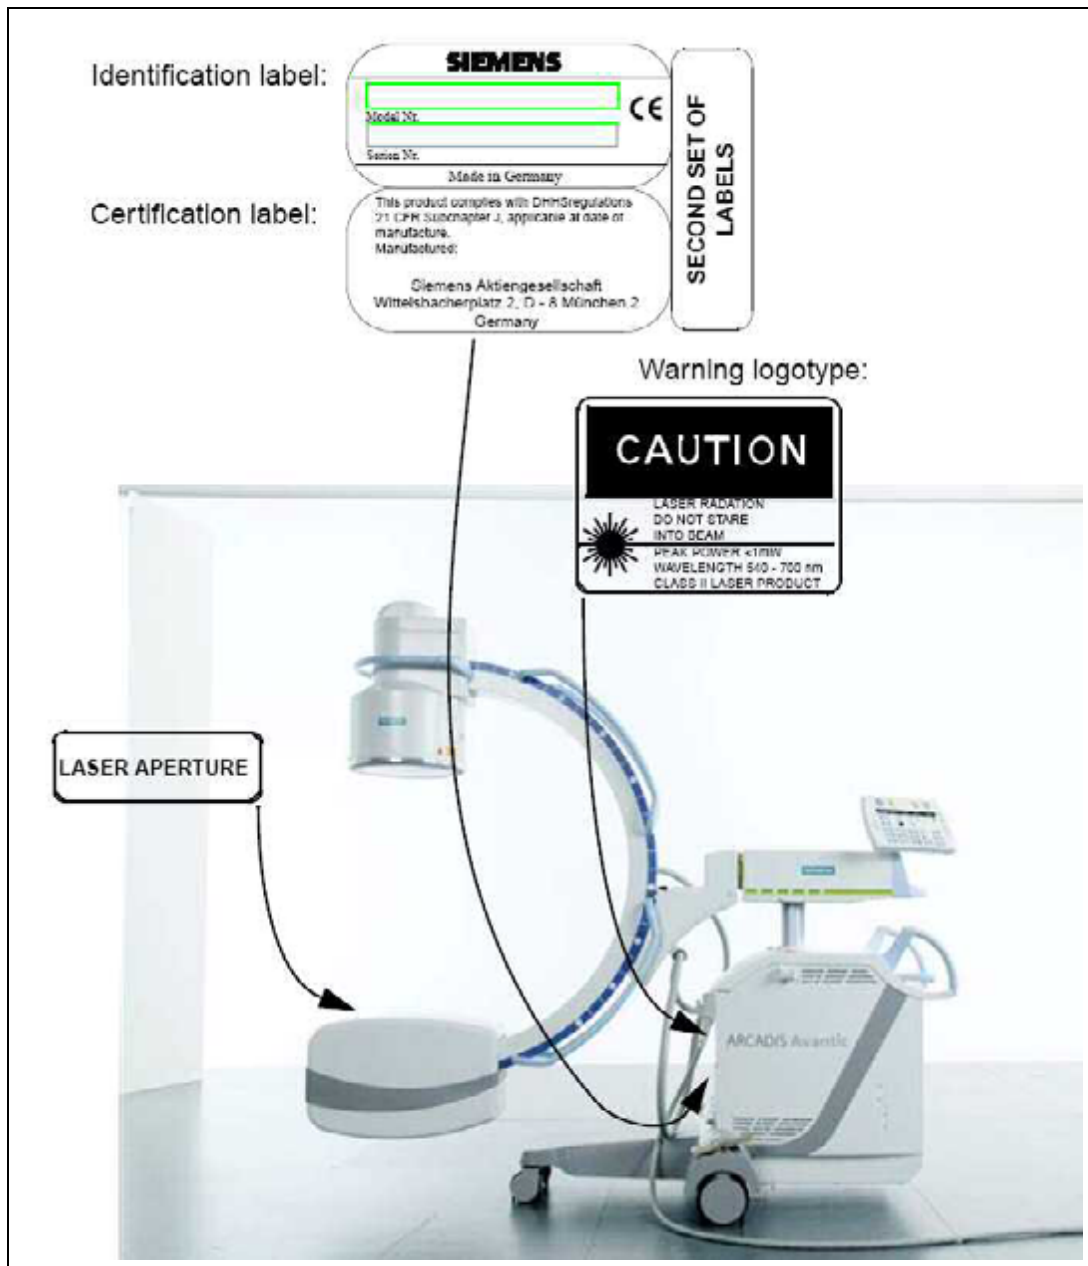
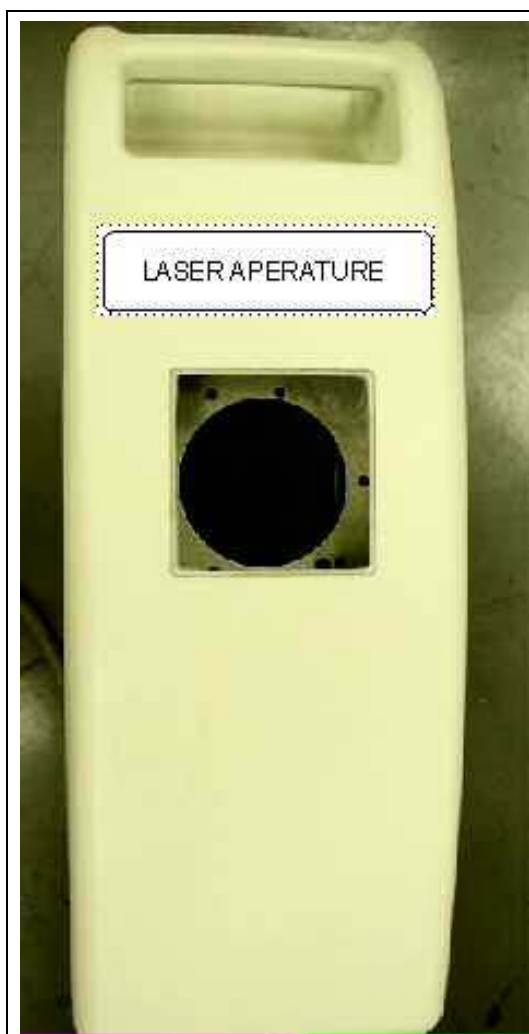


Fig. 5: Stickers\_other\_countries

- Affix the identification labels provided as shown in (Fig. 5 / p. 16) and (Fig. 6 / p. 17).
  - Affix the identification label, "class 2 laser" warning logo type, DHHS certification label, and the two laser aperture labels.





*Fig. 6: Sticker\_laser aperture*

## Affixing the identification labels for Great Britain and other countries

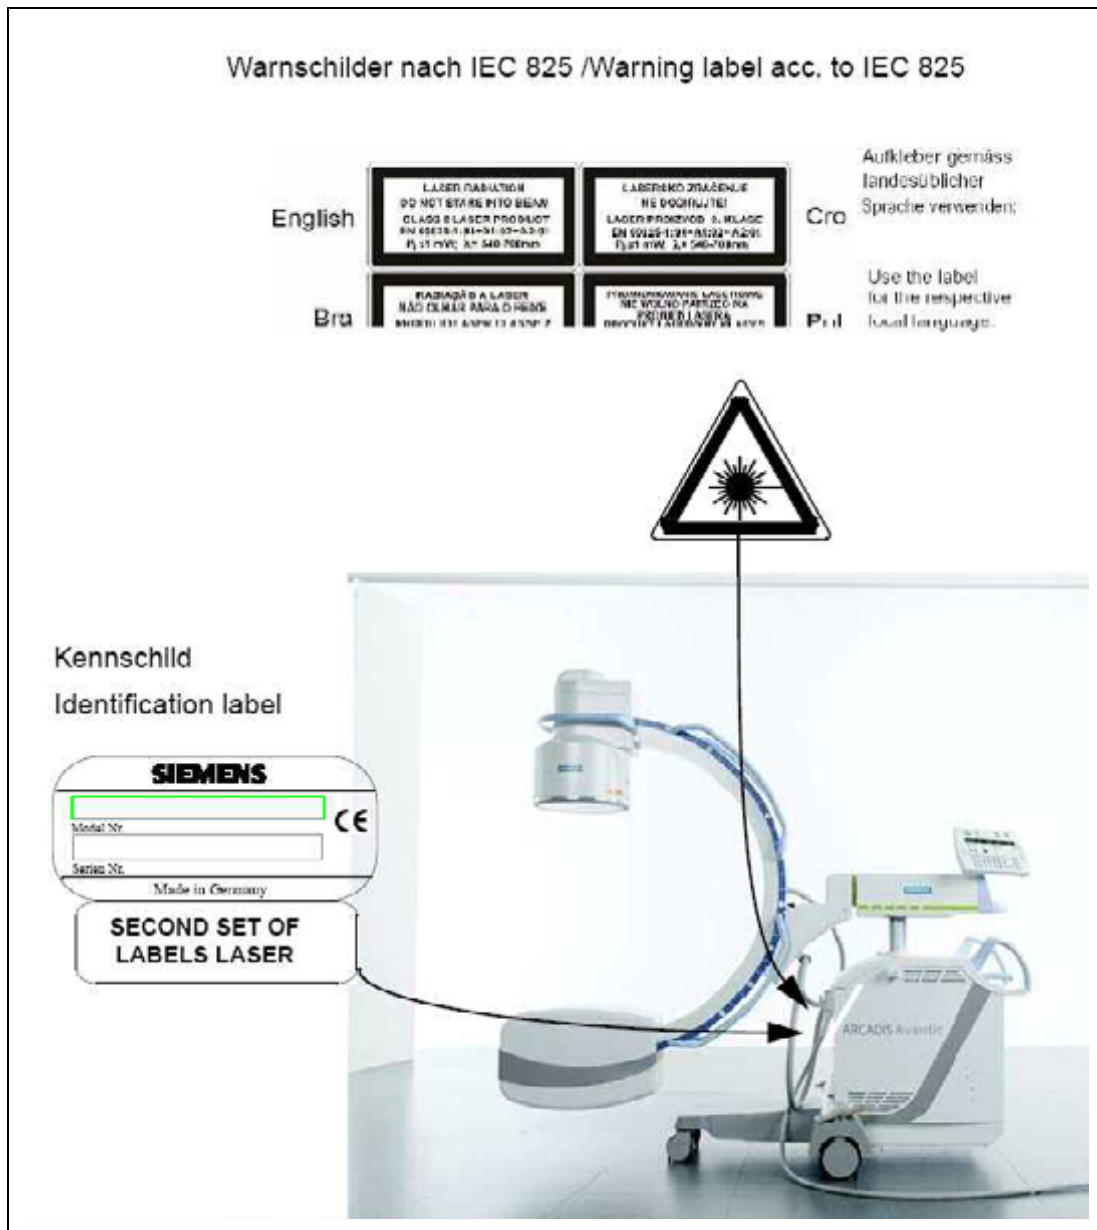


Fig. 7: Label\_not\_usa

- Affix the identification labels provided as shown in (Fig. 5 / p. 16) (other countries).

Great Britain: Affix the warning label according to IEC 825 (text) in the local language, warning label according to IEC 825 (symbol) and identification label. Attach additional laser aperture labels (see (Fig. 6 / p. 17)).

**Other countries:** Affix the warning label according to IEC 825 (text) in the local language, warning label according to IEC 825 (symbol) and identification label.

N/A; first version